



1. Assemble drawers after you have assembled the frame. BenchProTM drawers snap onto the tab welded to the front of the frame. The back is fastened down to the "Z-Bracket" in the foreground. Before you pick up the drawer set, remove the two bolts from the top of the Z-bracket.

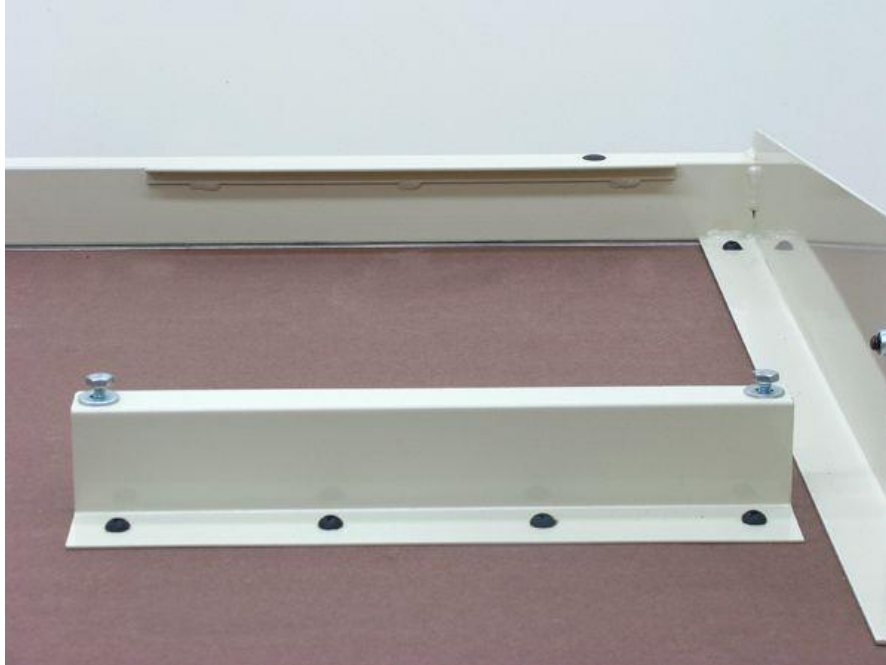

2. Next slide the two female tabs on the bottom of the drawer case onto the male tab on the bench frame. It will only slide on straight if it is properly centered. (The drawer is removed from the case to make this photo, but you don't need to remove it before assembly). Lay the back of the drawer set down against the Z-Bracket.

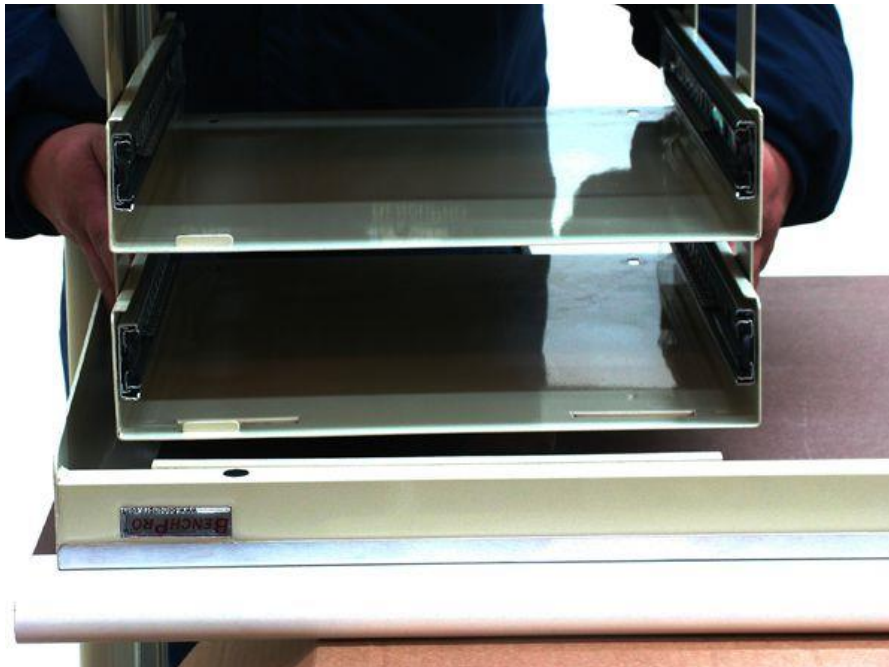

Drawer Assembly

Grant Series

3. Now reinstall the two bolts through the drawer case in the back and close the drawer. You're done. Remember when you turn the bench over to have the drawer rotate over the top so it does not come shooting out.

