


1. Insert the two double brackets into the slots of the uprights with the flat sides of the brackets facing outwards.

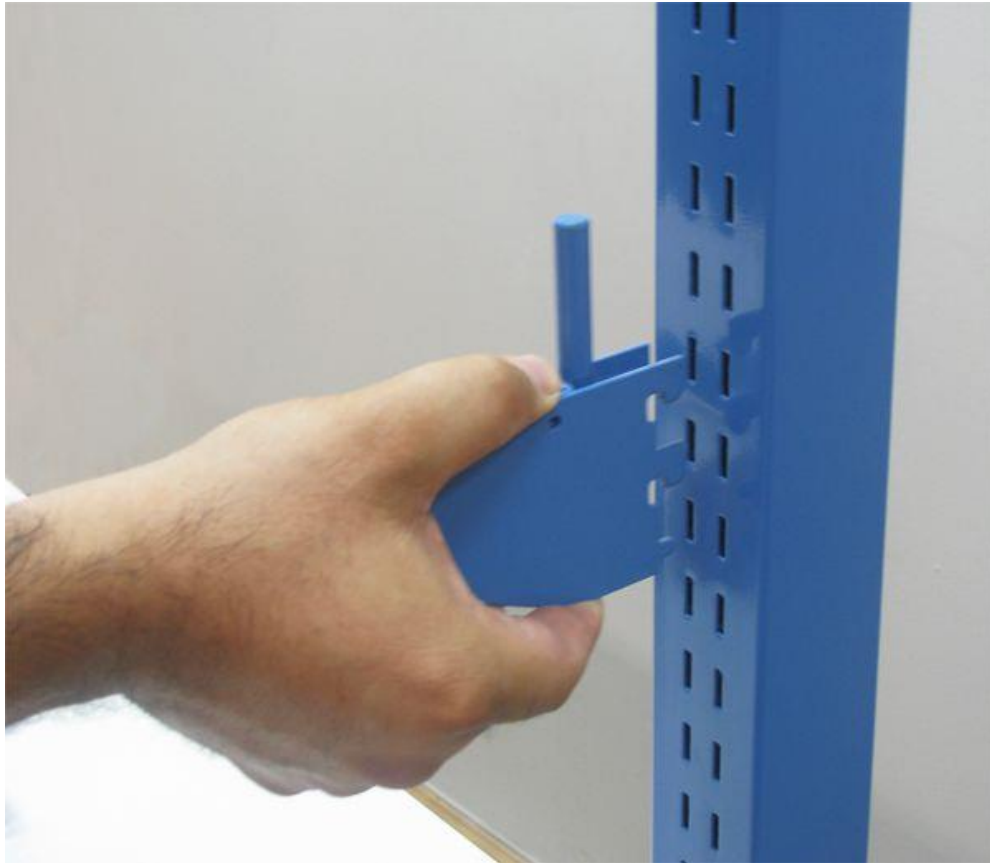

2. Place the tube over one of the pins and add your rolls.



3. Lower the other end of the tube over it's pin. That's all.

