


1. Position the drawer and slides over pre-drilled holes or anywhere else.

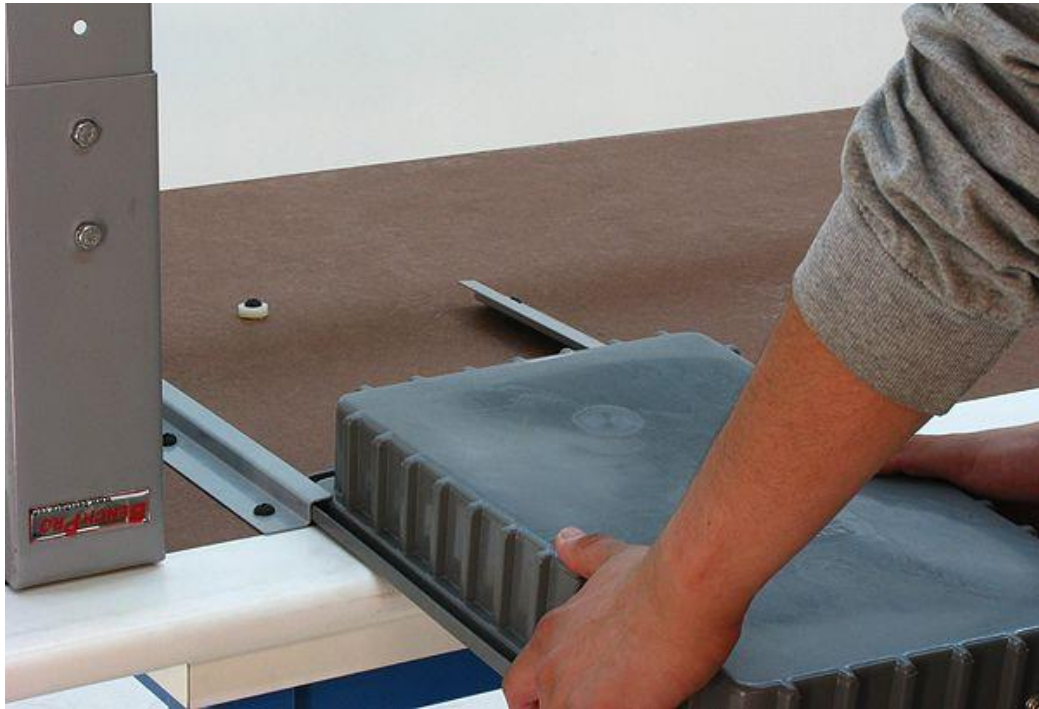

2. Insert three screws on each side. The seventh screw should be positioned near the front as a drawer stop. If you plan to use the drawer to carry product, do not insert the last screw.

